
Fluid Extractor Manual 10 Litres



Information

- 10L Capacity.
- Suitable for the extraction of all types of engine, transmission and lubricating oils from cars, motorcycles, marine engines, stationary engines and industrial machinery.
- Transparent body for visibility of the fluid during use.
- Suitable for fluid evacuation.
- Can be used for petrol, diesel, oil, etc.
- Multiple Adapters.
- Maintenance free.

Precautions

Always wear safety gear.
Working in a clean and safe environment.
This task should be carried out by trained personnel.
Make sure to consult manufacturers manual.
Do NOT use with air tools.

Instructions

1. Ensure the vehicle being worked on is on level ground and make sure the gear is set to 'neutral' or 'park' position. Apply the parking brake.
2. Switch the engine on until it reaches normal temperature, then switch the engine off.
3. Choose the correct suction tube from the kit and insert it through the dip stick tube while touching the bottom of the oil pan.
4. Try not to bend the suction tube during insertion. Continue to connect the suction tube to the suction hose.
5. Raise the pump handle on top of the cover until it reaches its highest limit. Gradually start to pump the handle until the unit begins to extract oil from the engines crankcase.
6. When completed, withdraw the suction tube from the vehicle. Add a new supply of oil to the vehicle. Switch on the engine again to circulate the new oil supply. Check the level in case it needs more oil added.



Pouring Out Waste Fluid

1. Take off the suction hose from the unit and see the spout on top of the cover.
2. Pour out waste fluid through the spout into waste reservoir.
3. After pouring make sure whether the unit can create suction for the new operation. If not, pull out the red rubber plug on the backside of the handle to release the pressure in the overflowing device.



connect suction tube to suction hose.

Warranty

If you are unsure on how to use the item please contact us. If it were to fail due to a manufacturing fault or poor workmanship we will repair or replace it. Please contact your local dealer in the event you need to send the item back. You can also make a repair/replacement request on our website and download & complete the form online. Normal wear and tear along with misuse will void any warranty. Consumables are not covered under warranty.

www.welzh.com

Limited **12 month** warranty



Welzh Werkzeug Ltd
Loanwath Road
Gretna, Scotland
DG16 5HD
+44 (0)1461 700120